



- Measure the width and height of the opening and add 4" (101.6mm). Cut the channel as shown and install beginning with the sill, then jambs and lastly the header.
- Fasten every 8" to 12" (203mm-305mm).
- Note: Make certain to create water diversion tabs on the top piece.

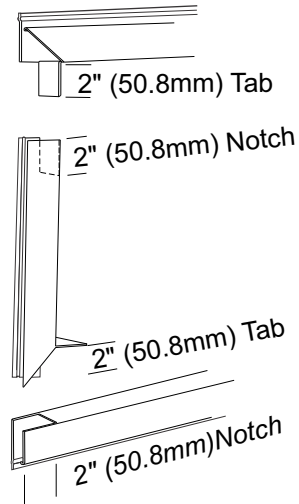

Install the Celect siding panels in accordance with the Celect Contractor Handbook with the exception of:

- 2" Face J-trim is installed prior to the siding panels.
- Measure for 1/2" (12.7mm) siding gap above and below the opening (see figure).

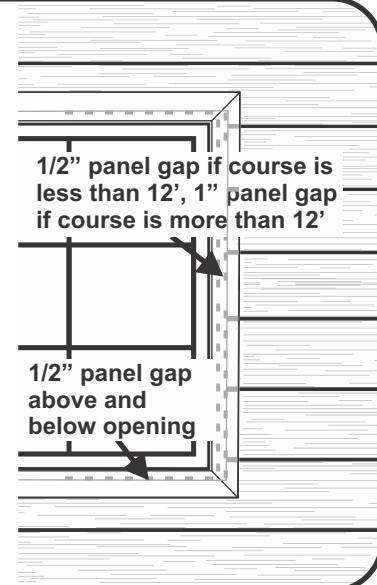

**IMPORTANT:** 2" Face J-trim is designed for use around openings. It can also be used in areas such as gables where the siding panels can be fastened outside of the channel. It is not designed to be used to finish the top course of siding. To finish the top course panel under the eaves, we encourage the use of the Celect Finish Trim. See the Celect Contractor Handbook for more details.

